
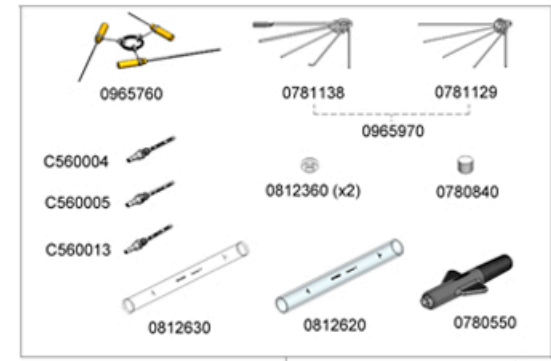


**RMSE-1A 120V**  
**RMSE-2A 230V**  
**RMSE-9A 100V**

**COMPLETE REWORK STATION**  
**WITH ELECTRIC PUMP**

SPARE PARTS		SPARE PARTS	
<b>DDE-1A / DDE-2A / DDE-9A:</b>			
-REAR CIRCUIT	0014997		
-ENCLOSURE			
- TOP	0011035		
- BOTTOM	0014567		
- FRONT+DISPLAY	0014612		
- BACK	0013413		
<b>MSE-A:</b>			
-CIRCUIT	0014058		
-ENCLOSURE			
- TOP	0014009		
- BOTTOM	0014010		
- FRONT	0014688		
- BACK	0014011		
-PUMP	0005652		
DDE-1A 120V FUSE T-4A		JT-1B 120V FUSE T-8A	
DDE-2A 230V FUSE T-2A		JT-2B 230V FUSE T-4A	
DDE-9A 100V FUSE T-5A		JT-9B 100V FUSE T-8A	

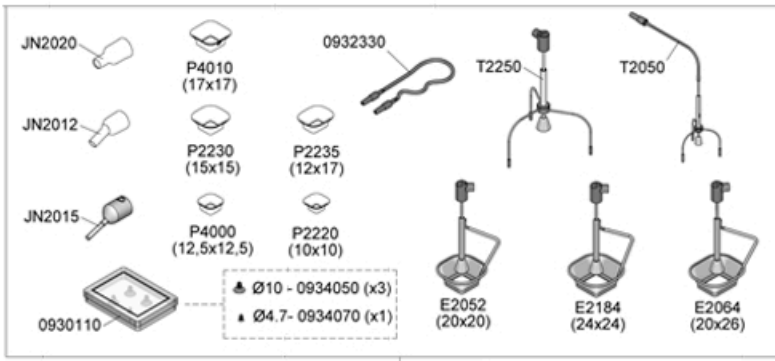

DDE-1A / DDE-2A / DDE-9A

JT-1B / JT-2B / JT-9B

